

CLEANING CADDY - RESTROOM CLEANING

Preparing to Clean:



1 Ensure the Cleaning Caddy unit is charged.




2 Check water and product levels.



3 Fill water and replace product, if necessary.




4 Open doors, place wet floor signs.

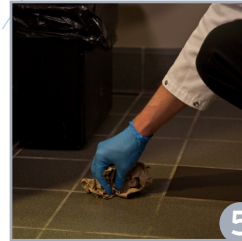

5 Pick up debris.



Cleaning:

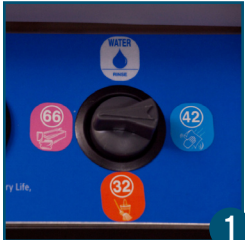

1 Select cleaning product.



2 Spray toilets, urinals, fixtures, counters, sinks and faucets.



3 Spray floors and scrub using deck brush.



4 Vacuum up the solution.



5 Empty wet-vacuum on the Cleaning Caddy.

Storage:




1 Clean, then charge the Cleaning Caddy.

⚠ WARNING: Do not spray electrical outlets, drywall or other sensitive surfaces.

ECOLAB®

CLEANING CADDY - FRONT OF HOUSE FLOOR CLEANING

Preparing to
Clean:

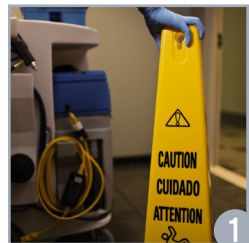

Place wet floor signs.

Cleaning:



Select floor cleaner.



Spray floors with
solution.



Use deck brush to
scrub floors.



Vacuum the solution.



Empty wet-vacuum on
the Cleaning Caddy.

Storage:



Clean, then charge the
Cleaning Caddy.

